


MiFleet

Installation Guide



2830 - HVAT: High Value Asset Tracker

What's Included:

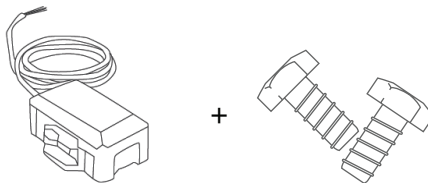

Device Installation:

1. **Locate** your vehicle's unswitched 3-Wire 12V/24V power line, ignition sense (greater than 9V) and ground line. Verify that the ignition sense exceeds 9 volts when on.

** For best results: it is strongly recommended that the device connection be on its own circuit. If possible, connect the power input directly to the vehicle battery and protect the circuit with an inline fuse. If you must connect through the fuse box, use standard commercial wiring practices to create a permanent installation rather than using press-in fuse clips or other temporary measures.*

2. Place **device** on surface in vehicle ensuring that top of device (MiFleet logo side) faces the sky.

3. Allow vehicle to run for **10 minutes** to allow for data to register on MiFleet portal.

Follow Diagram Below For Proper Wiring Instructions.

